


FRONT DOOR COURTESY SWITCH

COMPONENTS

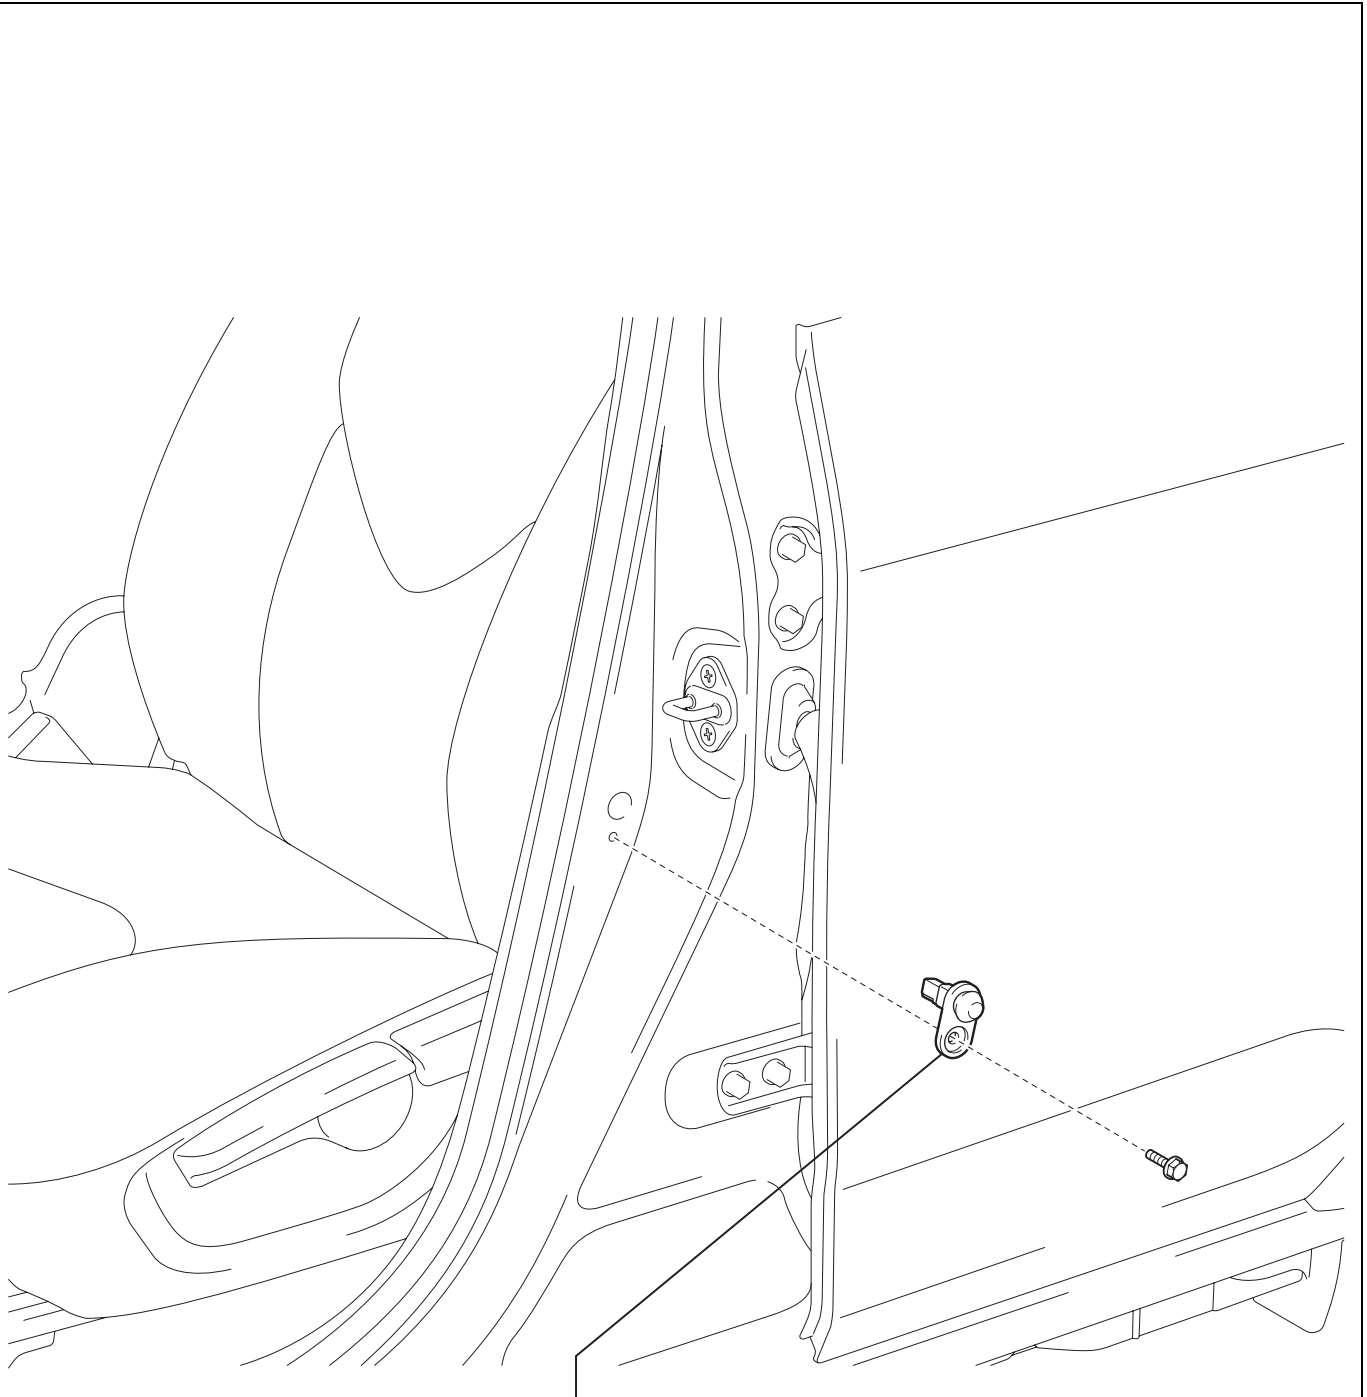

FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

- (a) Remove the bolt and switch.
- (b) Disconnect the connector.

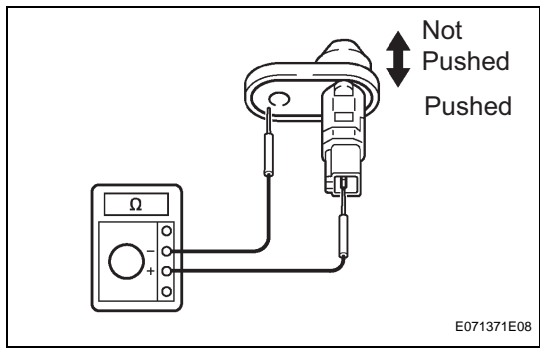

INSPECTION

1. INSPECT FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY

- (a) Measure the resistance of the switch.

Standard resistance

Tester Connection	Switch Condition	Specified Condition
1 - Switch body	Pushed	10 kΩ or higher
1 - Switch body	Not pushed	Below 1 Ω


If the result is not as specified, replace the switch assembly.



INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page [SS-2](#)).

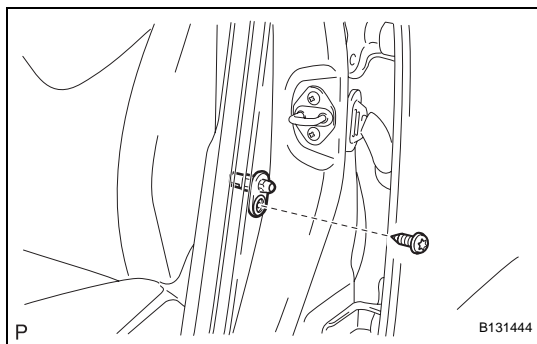

1. **INSTALL FRONT DOOR COURTESY LIGHT SWITCH ASSEMBLY**
 - (a) Connect the connector.
 - (b) Install the switch with the bolt.
2. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**